 
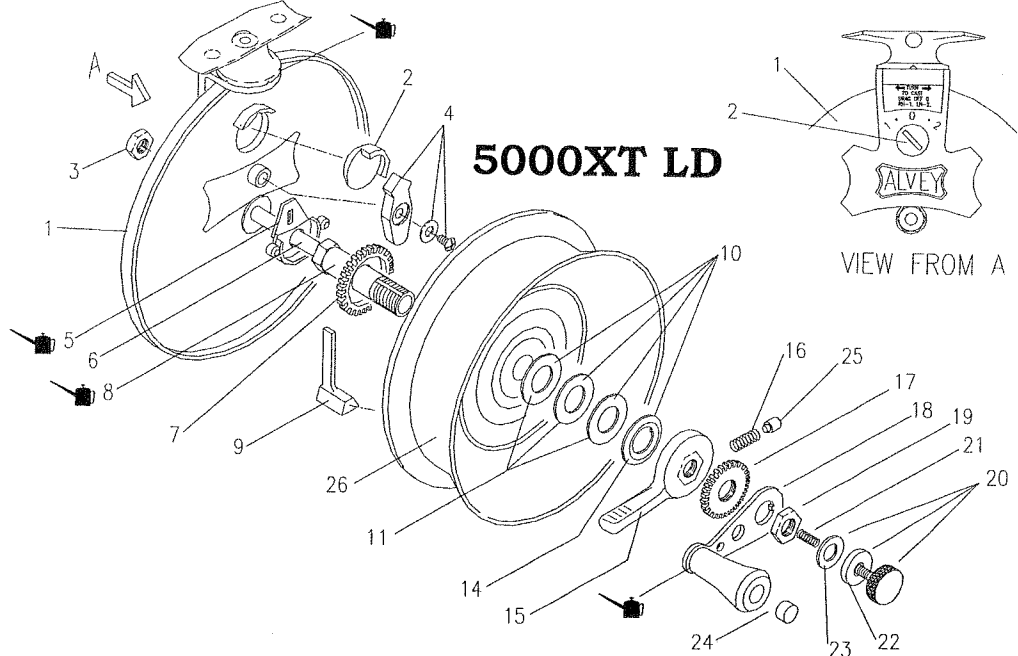 


# 5000XT LD

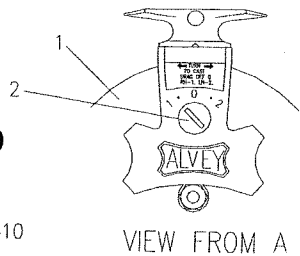

KEY No	PARTS DESCRIPTION	5000 XT LD	PART No
1	BACK PLATE AND ALL FITTINGS EXCEPT SPOOL		R1A-5000XT LD
2	DRAG ON / OFF KNOB		R7K6
3	SPINDLE HEX NUT		R6F1
4	DRAG PAWL		R7J5
5	SILENT DRAG CAM		R7L2
6	SPINDLE		R6A15
7	RATCHET WHEEL		R5B1
8	FRICTION TUBE		R7A5
9	RATCHET SPRING		R5F3
10	DRAG WASHER SET		R7B/C10
11	DRAG WASHER SET - TEFLON & FIBRE ONLY		R7C10
14	DRAG WASHERS - METAL		R7B1
15	DRAG TENSION LEVER		R7D9
16	DRAG INDICATOR SPRING		R5H2
17	DRAG INDICATOR WHEEL		R7F4
18	HANDLE PLATE ASSEMBLY		R7E17
19	HANDLE PLATE LOCK NUT		R7F1
20	SPINDLE SCREW & FITTINGS		R6E2
21	SPINDLE SPRING		R6C4
22	SPINDLE NITRILE WASHER		R6P1
23	D WASHER		R6D1
24	FELT PLUG		R4H1
25	DRAG INDICATOR PIN		R5J1
26	SPOOL ONLY	<p>SPOOL</p> <p>TEFLON</p> <p>RUBBER</p> <p>FIBRE</p> <p>RAISEDINNER</p>	R4A-5000XTLD